

GOPRO OMNI
v4.02.26.01.10 | FIRMWARE UPDATE INSTRUCTIONS

Updating Omni Firmware

1. Log in to the GoPro Support Hub. Use your GoPro Support account that has Omni access.
2. Prepare the five secondary cameras:
 - a. Download the Omni *Secondary* Camera firmware from the Support Hub (<https://community.gopro.com/t5/Omni/ct-p/Omni>).
 - b. Unzip the file (if necessary).
 - c. Copy the UPDATE folder onto *five* microSD cards (one for each secondary camera in the Omni array).
 - d. Insert the microSD cards into the secondary cameras.
3. Prepare the primary camera:
 - a. Download the Omni *Primary* Camera firmware from the Support Hub at (<https://community.gopro.com/t5/Omni/ct-p/Omni>).
 - b. Unzip the file (if necessary).
 - c. Copy the UPDATE folder onto *one* microSD card.
 - d. Insert the microSD card into the primary camera (camera 1).
4. Make sure the in-camera batteries are charged and inserted in the cameras or the external battery is charged and attached to Omni.
5. Power on each of the five secondary cameras (cameras 2, 3, 4, 5 and 6) in the array to begin updating them.

NOTE: Do *not* power on the primary camera until the secondary cameras have finished updating.
6. After secondary cameras are updated, power on the primary camera. The primary camera update begins, followed by the array system update. Be patient during the array system update—this process can take several minutes. When both updates are complete, the primary camera reboots, the LED lights on the inner cube are lit green, and the primary camera displays *Array Ready*.